

## Things you should know:

- The blue covering is a protective film to help prevent scratches during manufacture and shipment.
- Do not clean the plastic top and shiny aluminum surfaces with abrasive cleansers. Use only mild soapy solutions or window cleaners.



## Camp Kitchen



The Coleman Company, Inc.  
3600 N. Hydraulic  
Wichita, Kansas 67219  
1-800-835-3278 TDD: 316-832-8707  
[www.coleman.com](http://www.coleman.com)

© 1999 The Coleman Company, Inc. All Rights Reserved

Model No. 2142-700


**Warning:**

Follow instructions and warnings to avoid personal injury or damage to product.

- Always lock legs into position and use the Coleman® kitchen on a firm, level surface.
- Never stand on this product.
- Close and latch the top in windy conditions to help prevent tip over.
- Do not operate hot appliances near the plastic top or corner pieces.
- Keep children a safe distance from the Coleman® kitchen at all times unless under proper adult supervision.


**1**

- Unlatch side table

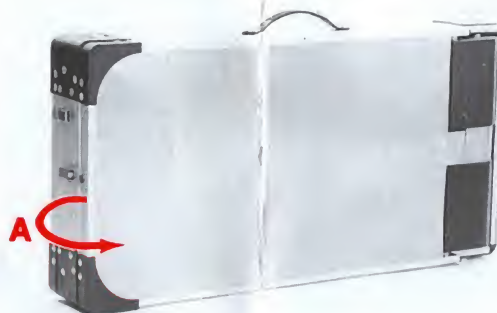


**2**

- Open side table fully

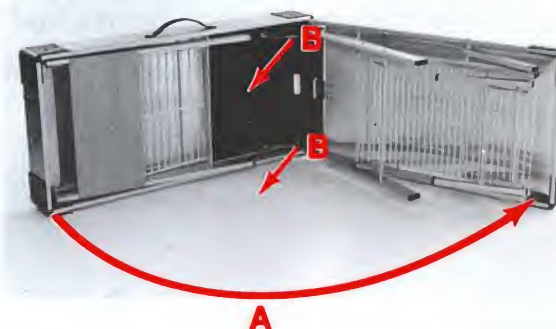


**3**

- Open and lock all right side legs

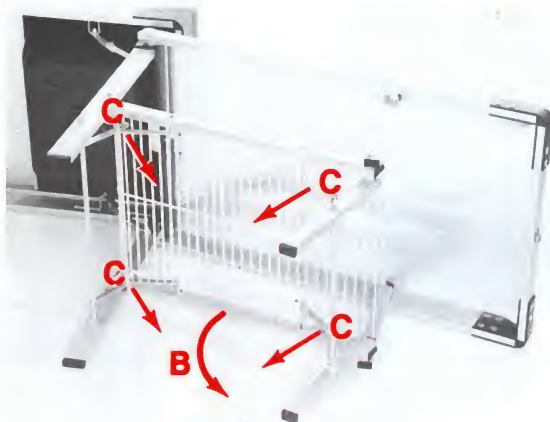


**4**

- Open and lock left legs

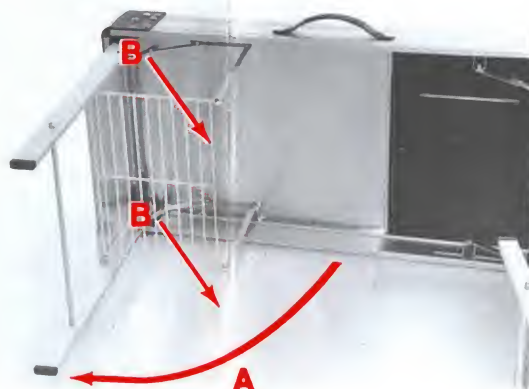

**5**

- Stand table up and unlatch top

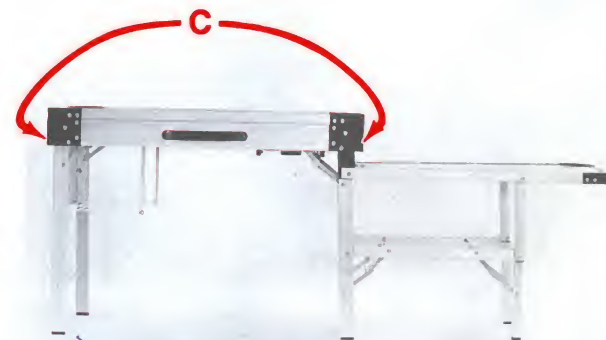

**6**

- Open and lock top



**7**

- Locate and lock hose attachment to underside of sink



**8**

- Table is ready for use

